





■ VR626*LVM / VR627*LVM - BASE ASSEMBLY

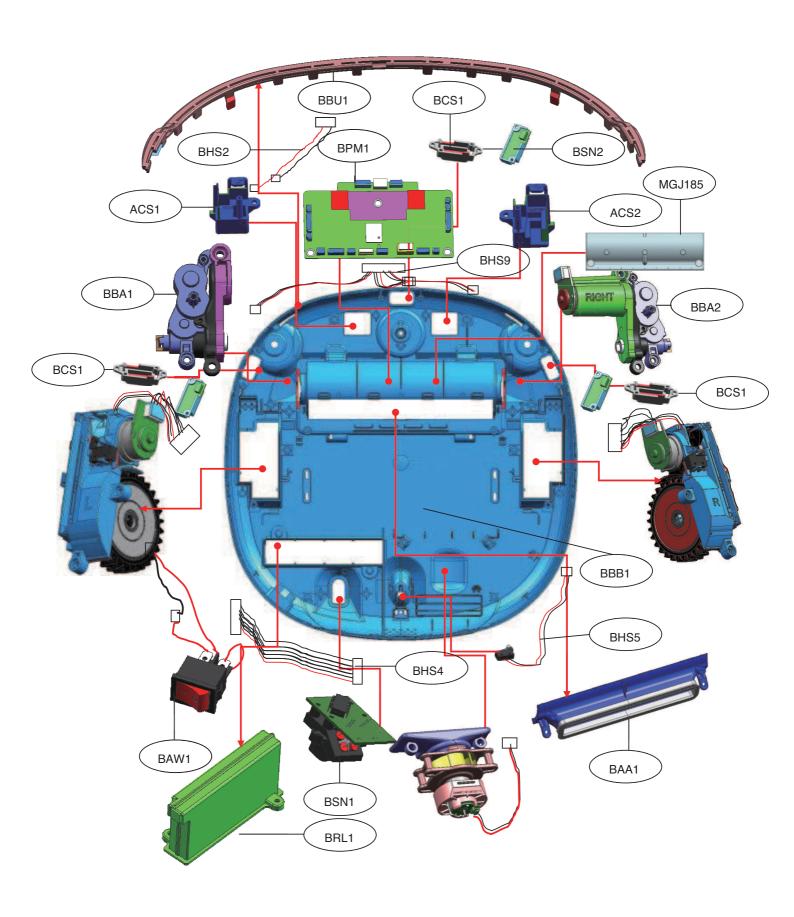

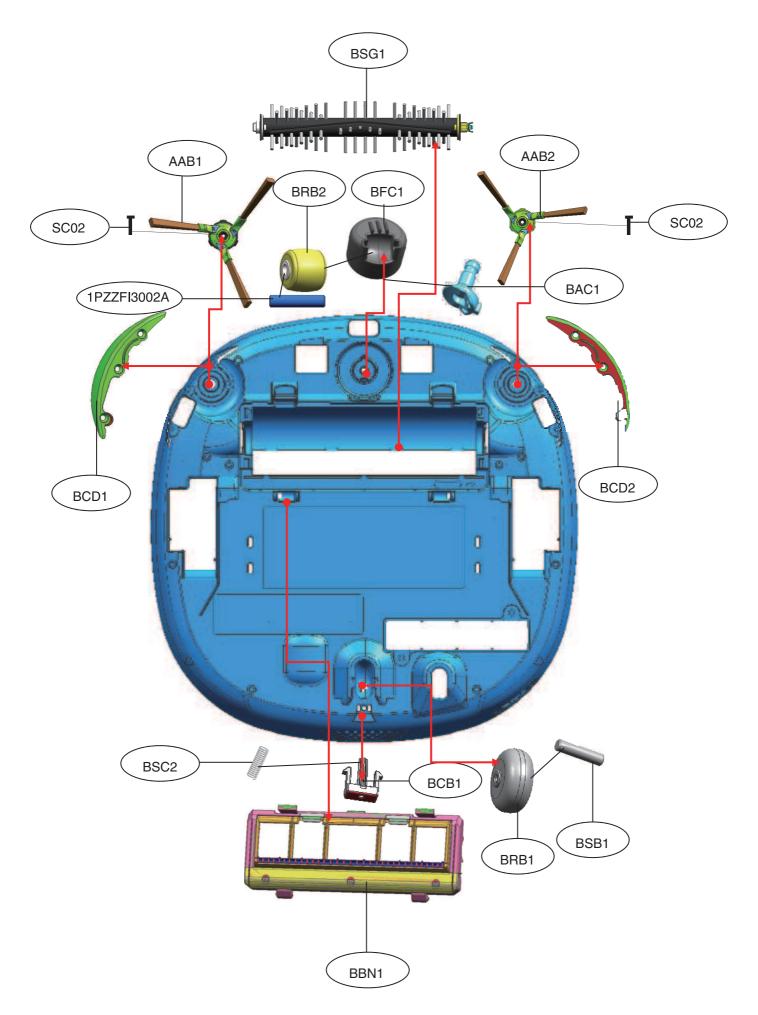


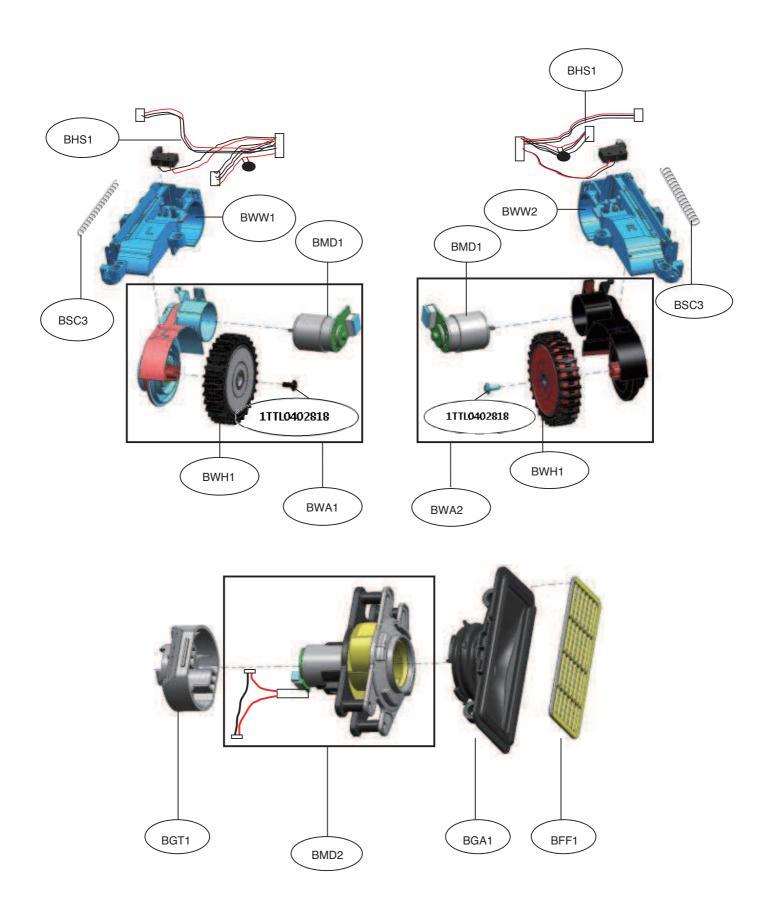

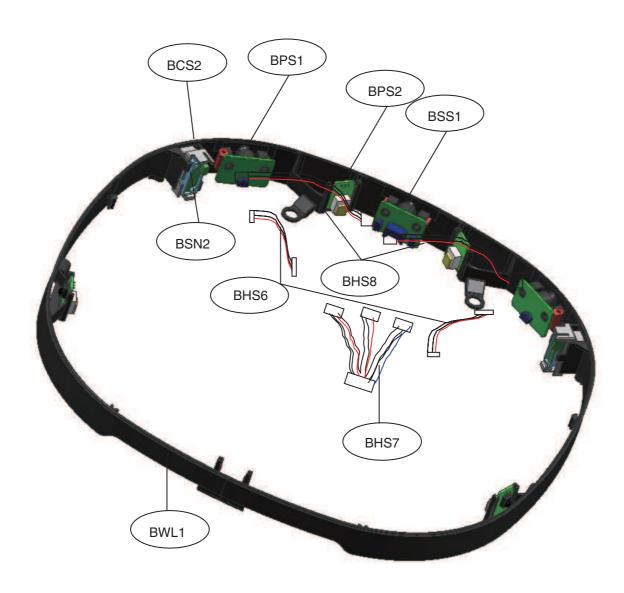




■ VR626*LVM / VR627*LVM - Cover Assembly

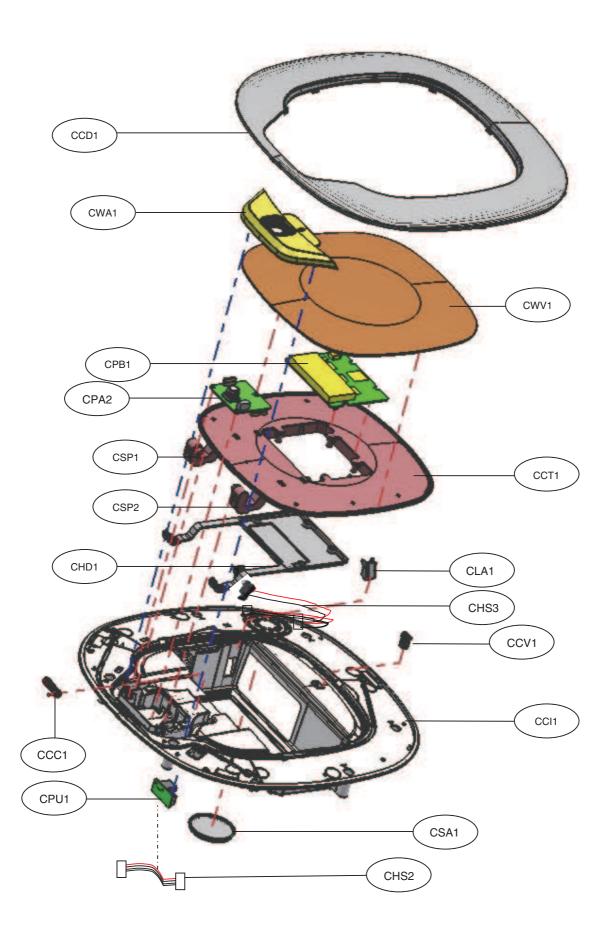




■ VR626*LVM / VR627*LVM - Charger.Battery

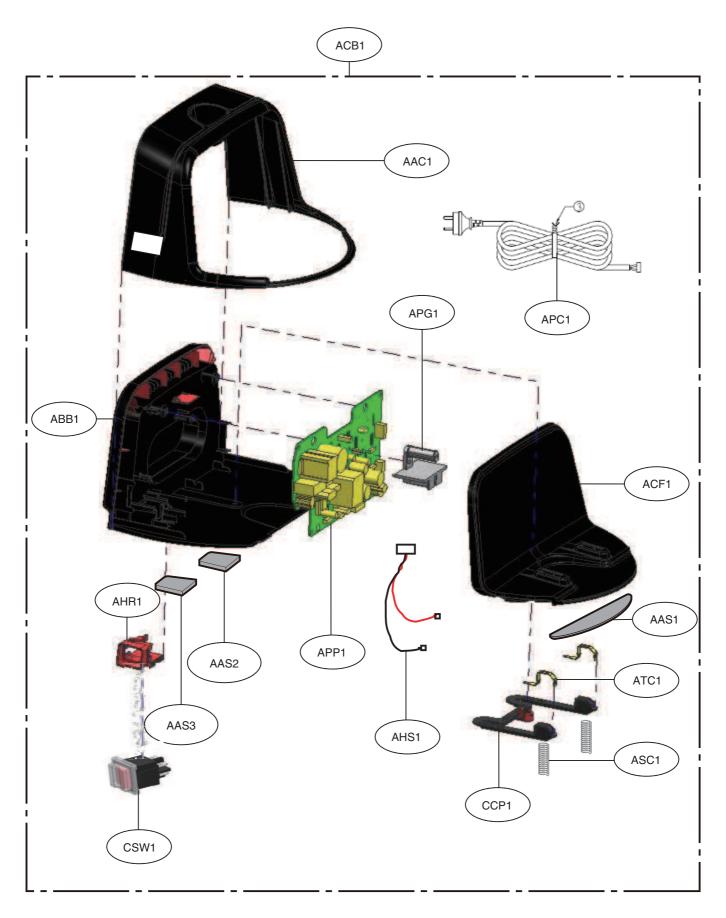




■ VR626*LVM / VR627*LVM - Tank Assembly, Dust

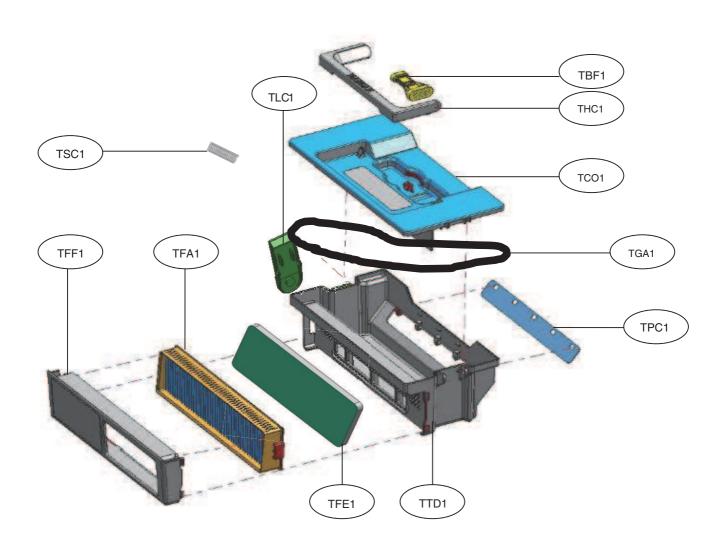



■ VR626*LVM / VR627*LVM - Remote Controller Assembly

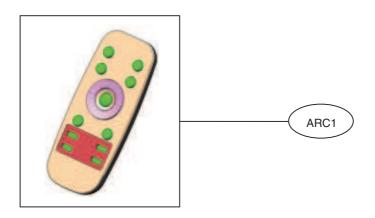

Deal Drawing of the Structure and List of Parts

VR626*LVM / VR627*LVM - Accessory Assembly

